

Floor preparation:

Sweep away dirt and debris, clean with a general cleaner, and allow the floor to dry completely before application.



Proper placement:

Don't apply over floor seams and joints, or on rough, uneven surfaces like asphalt.




Apply directly:

Avoid placing over floor tape or painted lines. Underlying layers can affect adhesion overtime.



Edge overlap:

Leave 1/2" of laminate beyond the label edges. This creates a tight seal, protecting against contaminants and abrasion.

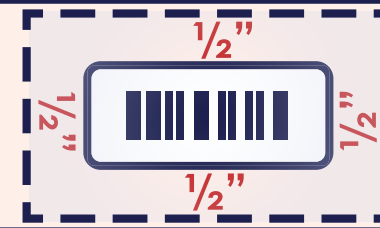


Press firmly:

You can use your hand or foot to apply pressure, but a forklift leg works great and requires a little less muscle.



Bonding time:

Wait 48 hours before allowing forklifts, carts, or foot traffic on the new shield for optimal adhesion.

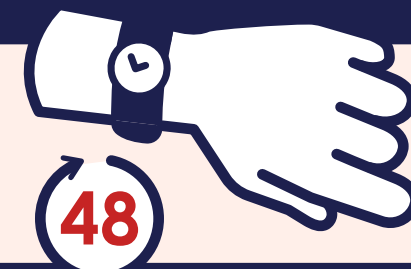

TOP 10 TIPS

To make your floor labels last!

Maintenance and Use

- ✓ **Keep Clean:** Keep warehouse floors tidy for longer lasting labels
- ✓ **Proper Operation:** Don't drag pallets, protruding nails can damage labels
- ✓ **Adaptive Option:** Easy to remove, simply peel off using a scrapper blade
- ✓ **Optimal Application:** Match labels to their intended environment

